

RUBBER HOSE STRUCTURE

REINFORCEMENT

REINFORCEMENT: also knows as
the body, is the strength
reinforcement member of hose
which prevents the tube from busting.
it is comprised of synthetic textile plied,
spiralled or braided depending upon
service requirement. the carcass also
serves to increase heat resistance and
provide a shield againts internal kinkingor
external damage

TUBE

TUBE: the innermost part of the hose.
It is comprise of rubber or other elastomer designed to carry spesific material, without allowing the material to escape or adversaly affect itself.

HELIX WIRE

HELIX WIRE: part of hose arcass when conditions call for suction or vacuum service. the helical wire also aids in making hose kink and crush resistant.

COVER

COVER: the outermost part of the hose used to protect the carcass and the tube from deterioration caused by abrasions, temperature, sunlight, moisture, oils, weathering and corrosion.